Register your product and get support at
www.philips.com/welcome


Indoor wireless headphones

SHC5112



EN User manual	LT Vartotojo vadovas
BG Ръководство за потребителя	LV Lietotāja rokasgrāmata
CS Příručka pro uživatele	NL Gebruiksaanwijzing
DE Benutzerhandbuch	PL Instrukcja obsługi
EL Εγχειρίδιο χρήσης	PT Manual do utilizador
ES Manual del usuario	RO Manual de utilizare
ET Kasutusjuhend	RU Руководство пользователя
FI Käyttöopas	SK Príručka užívateľa
FR Mode d'emploi	SL Uporabniški priročnik
HR Korisnički priručnik	SV Användarhandbok
HU Felhasználói kézikönyv	TR Kullanım kılavuzu
IT Manuale utente	UK Посібник користувача

SHC5112_V1.0

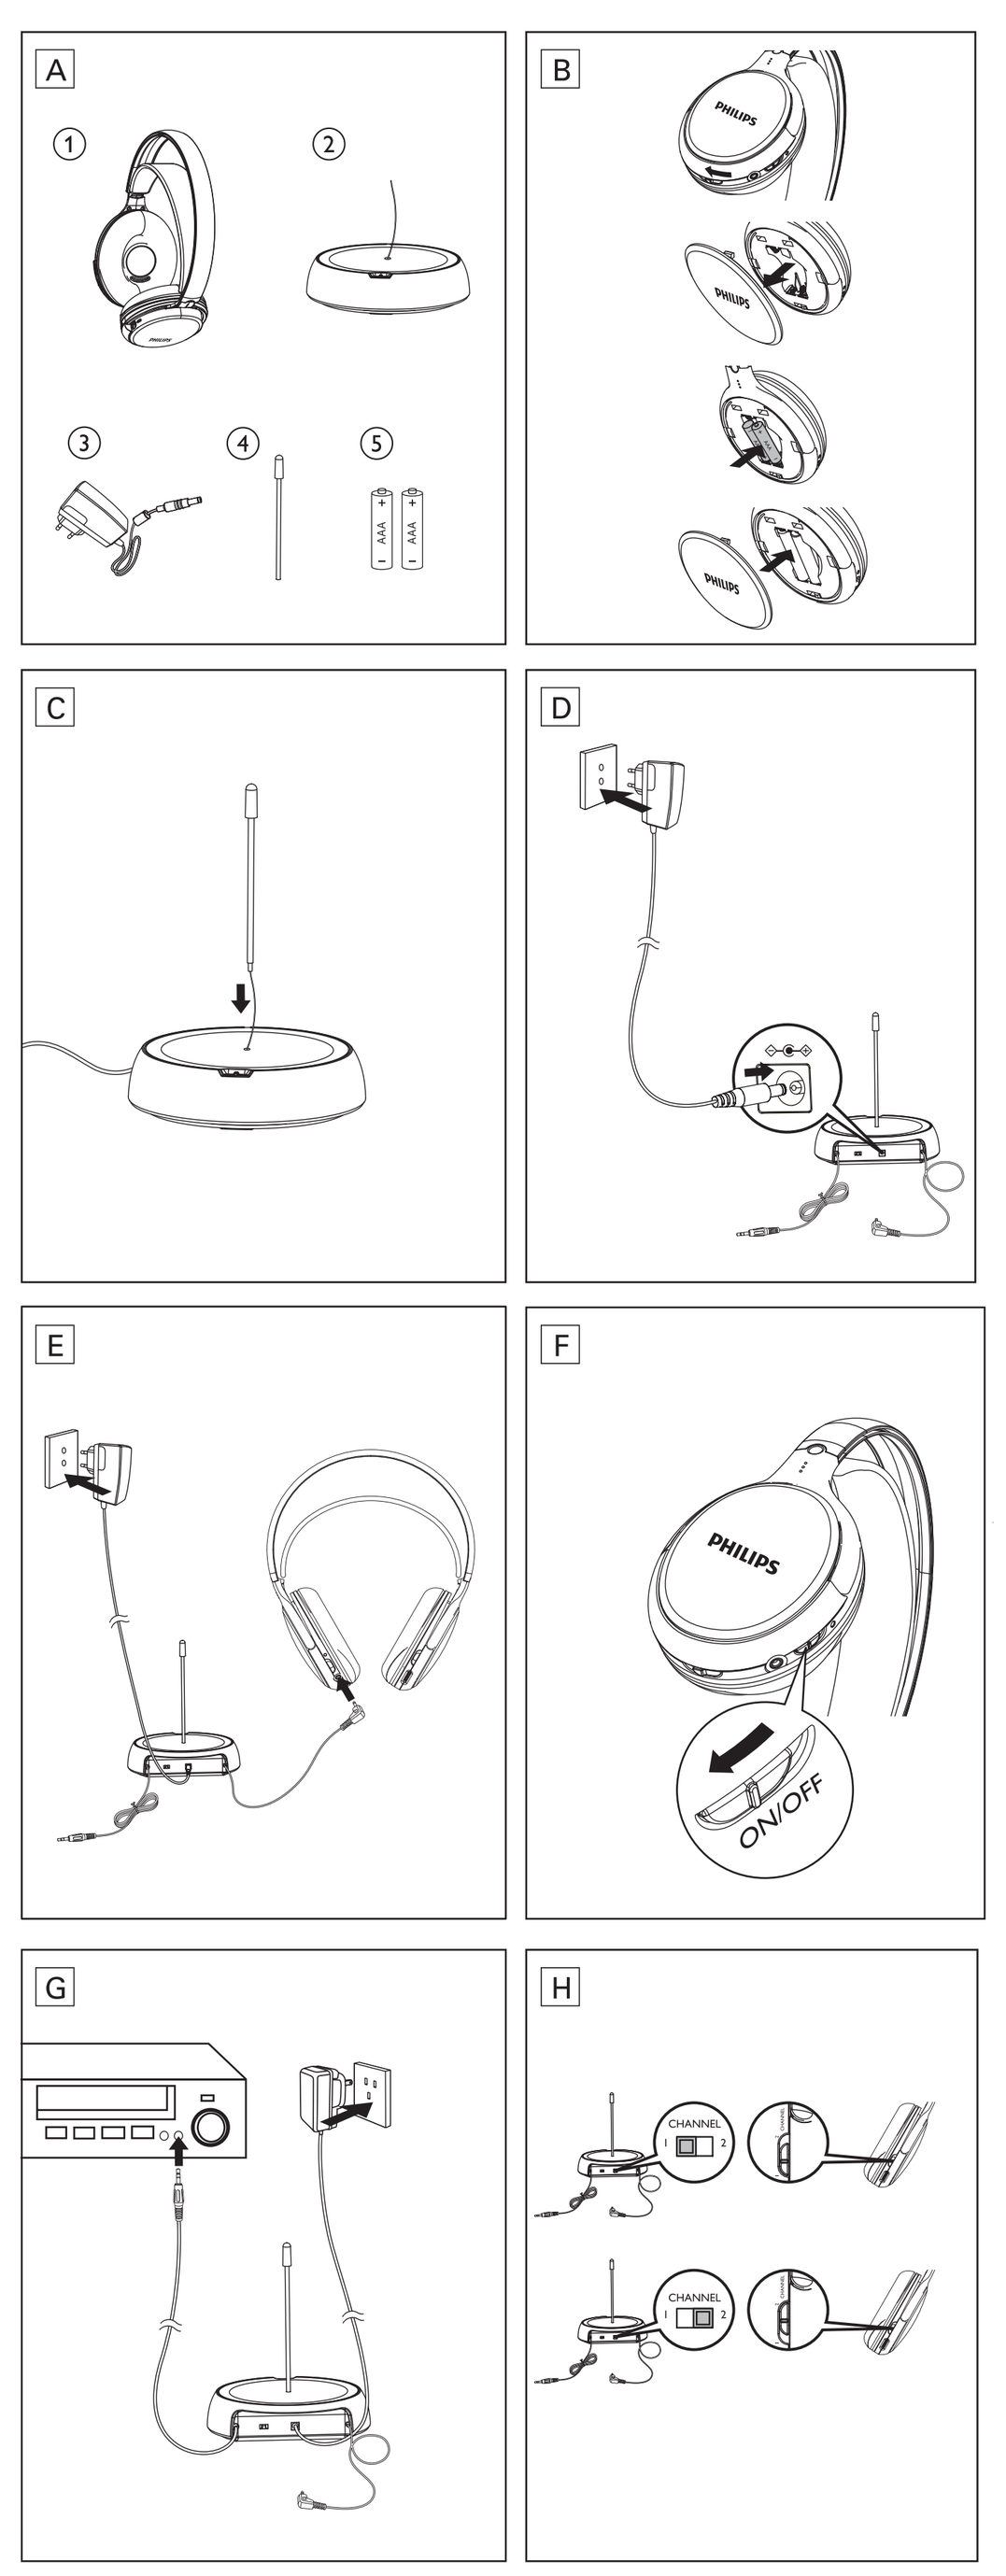

EN

1 What's in the box (Fig. A)

1) 2 x Headphones	2) Transmitter
3) AC/DC adaptor	4) Antenna tube
5) 4 x AAA rechargeable shortened sleeve NiMH batteries (SBC HB550L)	

2 Get started

Note

- Before using the headphones for the first time, charge the supplied batteries for at least 10 hours.
- **Only use Philips rechargeable shortened sleeve NiMH batteries with your headphones. Other types of rechargeable batteries cannot be charged with this system.**
- **AAA alkaline batteries can be used to operate the headphones, but cannot be charged with this system.**
- If the volume of the audio source is insufficient, the transmitter automatically turns off.

1 Install/Replace supplied batteries (Fig. B).
2 Install the antenna tube into the transmitter (Fig. C).
3 Power on the transmitter (Fig. D).
   ↳ Red LED is on when audio source is connected.
   ↳ Red LED blinks if no audio source is connected for two minutes.
   ↳ Red LED is off if no audio source is connected for four minutes.
4 To charge the headphones, connect the charging cable with the headphones (Fig. E).
   ↳ Headphones: red LED is off during charge.
   ↳ Transmitter: green LED is on during charge and is off when headphones are fully charged. When one headphone is during charge, another one can still be used.
   ↳ Transmitter: both read and green LED are on.
5 Power on the headphones and red LED is on (Fig. F).
6 Connect the audio device with the transmitter (Fig. G).
   ↳ Green LED is on when it is connected.

Tip

- If there is interference, tune the transmitter and the headphones to the same channel (Fig. H).

3 Product version table

Version / Region	Input voltage / frequency	Output voltage	Carrier / Reception frequency	
			Channel 1	Channel 2
/10 Europe	100-240V / 50/60Hz	8V 200mA	863.5MHz	864.5MHz
/05 UK	100-240V / 50/60Hz	8V 200mA	863.5MHz	864.5MHz

For further product support, please visit **www.philips.com/welcome**

BG

1 Какво има в кутията (Фиг. A)

1) 2 бр. слушалки	2) Предавател
3) AC/DC адаптер	4) Тръба за антената
5) 4 бр. акумулаторни NiMH батерии тип AAA (SBC HB550L)	